

CAR689

Firmware Update

Instructions

Edition : V1.2

SOC [ISPBOOT.BIN] Update instructions :


- 1、 SOC upgrade file decompression, the [ISPBOOT.BIN] file placed in the USB root directory.
- 2、 Press the reset button (inside the red circle), then turn the ILL on / off 5 times (opening / closing 2 actions for 1 times) in 4 seconds.



- 3、 Waiting for 25 seconds, the appearance of the picture. (if you wait for 40 seconds or more, no pictures appear, please change the U disk to start from the first step).




- 4、 The above picture is upgrading, please do not power down or pull out the U disk. When the following picture appears, it represents a successful upgrade.

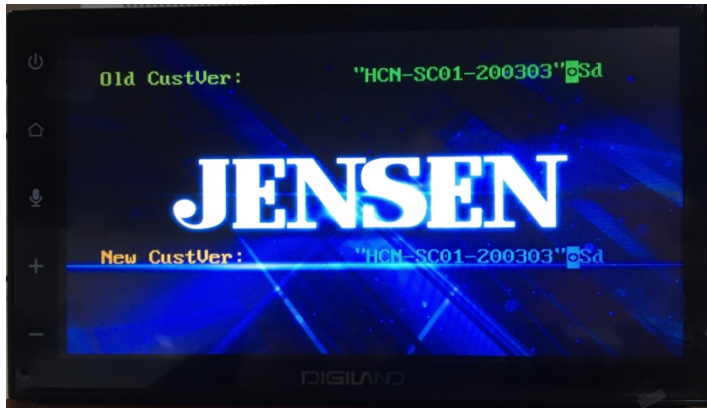


5、 After the upgrade is successful, power off and power on again.

MCU Update instructions :


1. MCU upgrade file decompression, copy [st25mcu.bin] to update directory, place **update folder** in USB root directory.
2. Click the [Setting] icon (inside the red box).

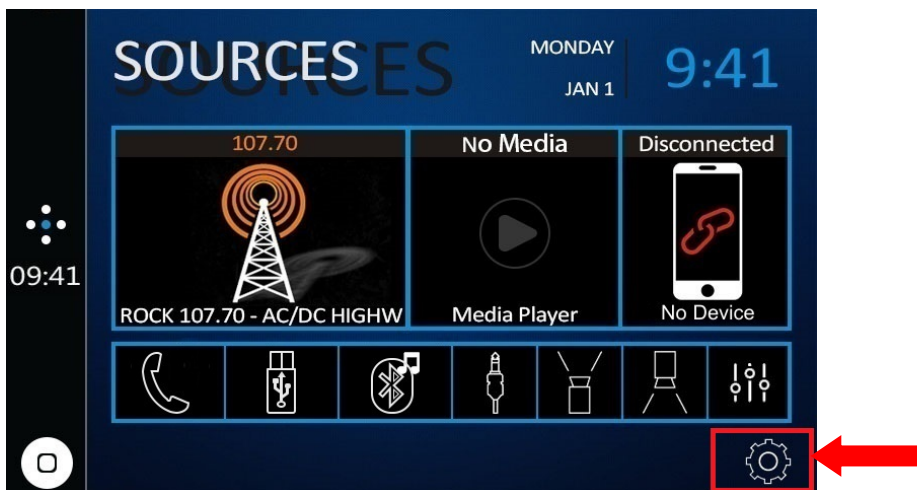


3. Enter the Settings interface and select [About] icon (inside the red box).

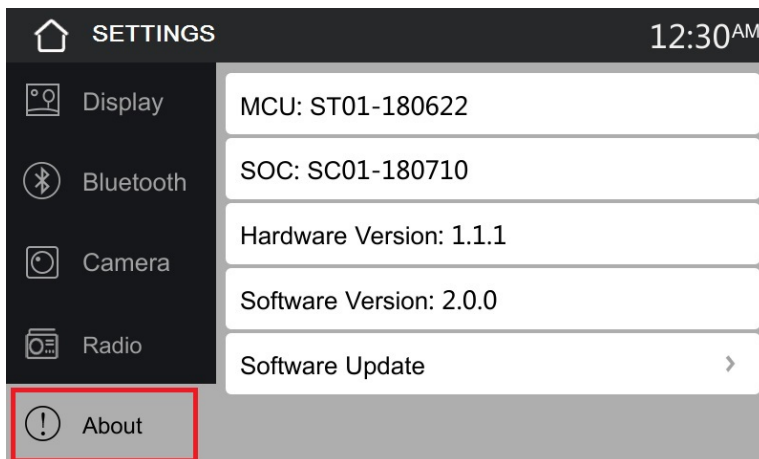


4. Select [About] icon, go to the bottom image and click the [Software Update] button (inside the red box).

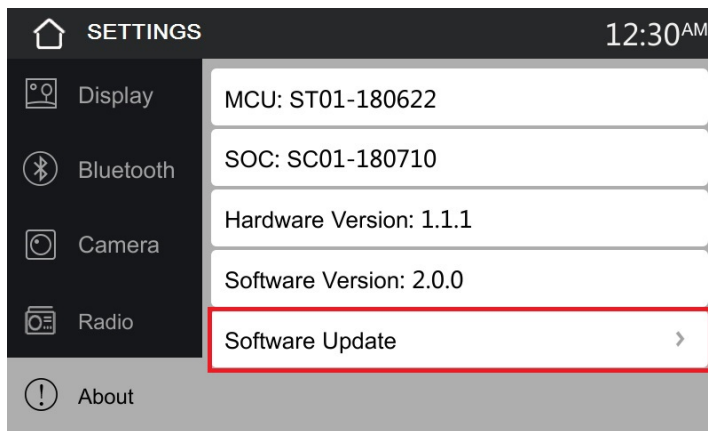

5. Click the [Software Update] button and enter the lower interface

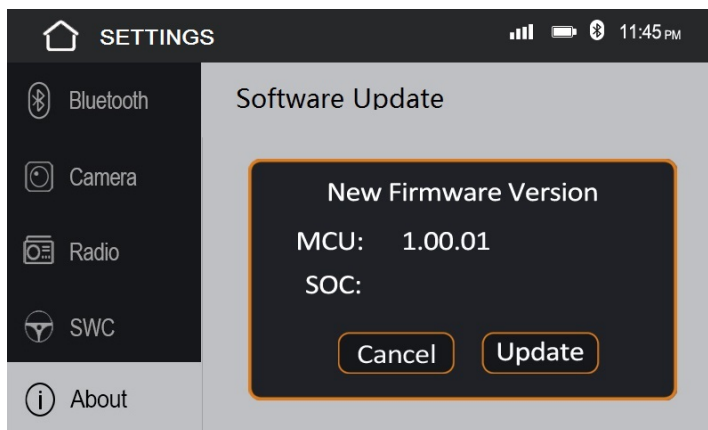

6. Click the [update] button and enter the lower interface

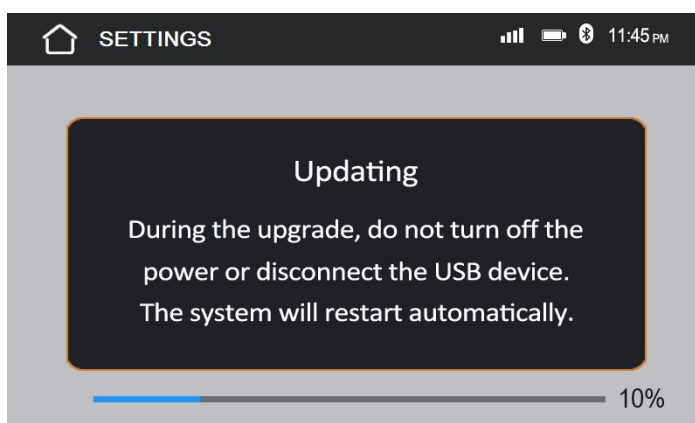

7. Observe the upgrade progress bar. When the progress bar is completed, the system will automatically restart.

[Note]

1.Once the MCU and SOC software have been upgraded, the receiver must be factory reset (Setup-->General-->Factory Reset) for the firmware to be active.